





This jumper wire can be used to connect the large battery cable on the starter solenoid to the positive terminal of the coil, or to bypass the Oil Pressure Safety Switch (OPSS). If the OPSS is not easily accessible, install the enclosed quick disconnect close to the electric fuel pump with the male connector on the fuel pump side for easy connection to the jumper wire.

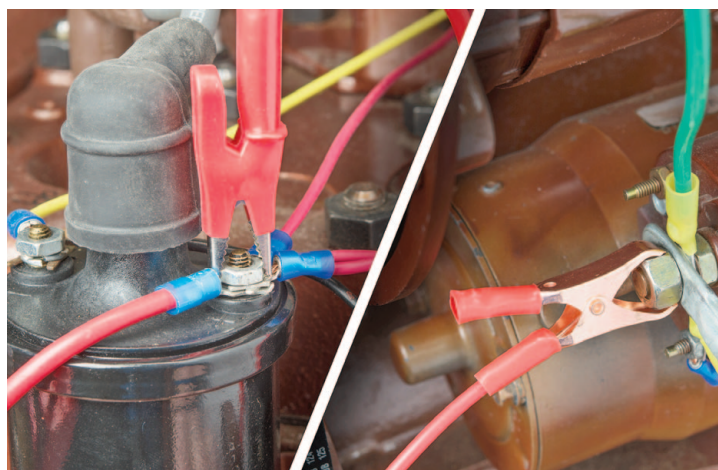

**Usage 1:** Jumper wire connecting battery cable on starter solenoid to positive terminal of coil.



Included quick disconnect terminal preinstalled between fuel pump and OPSS.

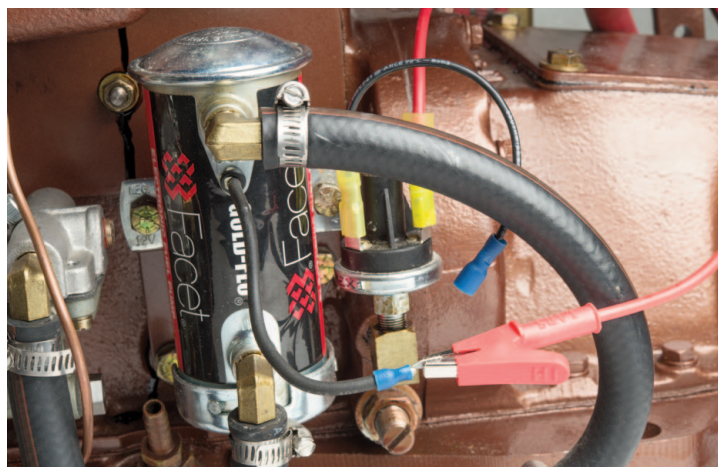

**Usage 2:** Jumper wire connecting battery cable on starter solenoid to fuel pump, notice quick disconnect terminal has been temporarily pulled apart.