





You will be using two terminals on the back of the starter solenoid (Fig. A). Clamp one alligator clip to the big battery cable terminal (or terminal nut), and the other alligator clip to the “S” terminal (Fig. B). As long as the battery master switch is on, and the remote starter switch button is depressed, the starter will operate with or without the ignition switch being on. It is intended only for intermittent use during troubleshooting.

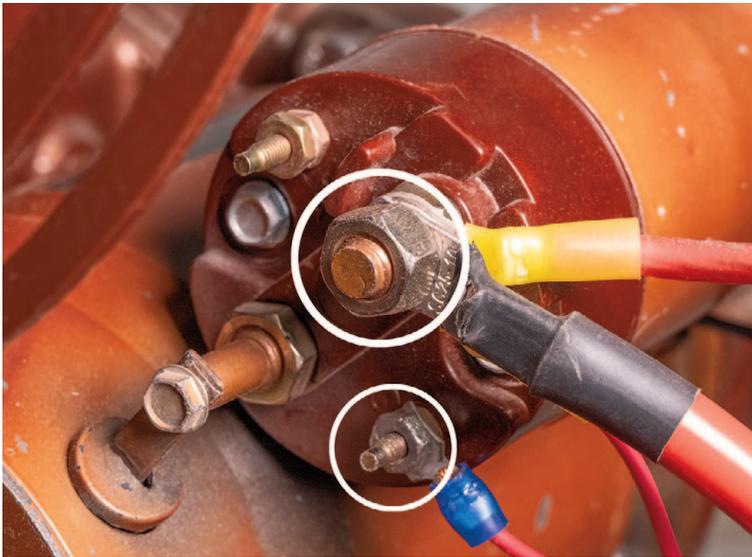

A

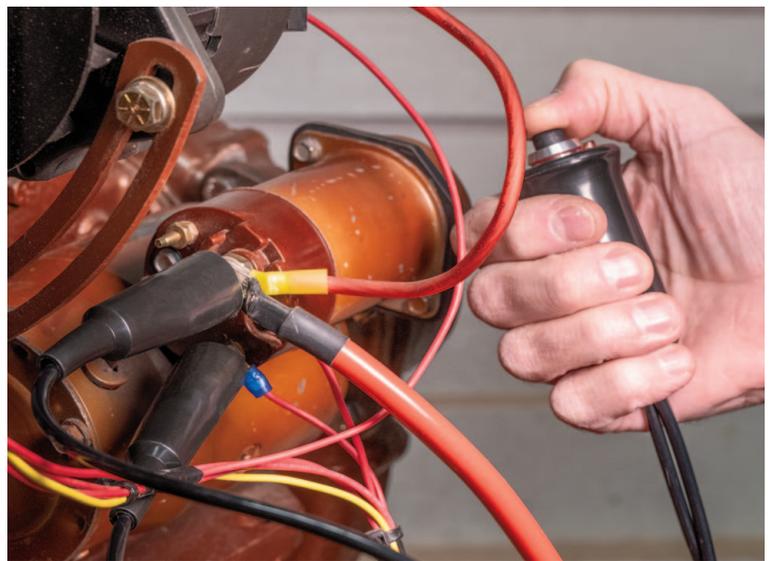

B